

6.8 Multi-Mode Display

Vidscope-HD+ has the ability to display up to 6 separate waveform windows at once. This mode is switched from the normal single mode by the Multi button found either on the waveform menu or the setups menu.

When in Multi mode you can either have a default set of window modes or switch to the User mode, where you can select any arrangement of the six windows you choose. Multi-mode is automatically selected if the main application window: **Options >> Integrate Vidscope windows** is clicked. This puts the whole display into the one window with the multiple panes.

Multi –Mode Default

The six windows are identified by pane numbers 1,2,3 on the top row and 4, 5 and 6 on the bottom row. In default multi mode the control menus automatically linked to the default panes.

PANE 1	PANE 2	PANE 3
Always a picture monitor	Always audio level bars	Any selected audio display default to audio vectors
PANE 4	PANE 5	PANE 6
Always Luminance waveform (wfm)	Always vectorscope default 75% cal	Can be set by user to either histogram, component RGB parade or gamut

If you left click on any display window, the menu will change to the current mode for that window for convenient change.

Double left clicking a window will zoom up that display to single display mode, cancelling multi-mode. Double clicking again, restores multi-mode.

Multi – User Mode

The first time user is selected, the six windows may very well be blank or in random displays. To set any window, left click on it – the pane number will appear in the title of the control menu. Then select the display mode required using any video or audio control menu. Do this in turn for each pane required. Move the pane vertical and horizontal dividers to arrange the relative geometry for optimum clarity. If you left click on any display window, the menu will change to the current mode for that window for convenient change. In user mode it is recommended that the settings are saved as User Presets for later recall. These are found either in the setups menu or displayed in the main application window once **Options >> Show Presets** is selected.

Double left clicking a window will zoom up that display to single display mode, cancelling multi-mode. Double clicking again, restores multi-user mode. If the Show Title option is checked in the setup menu, the bar highlights when selected.

The setups menu has a set of buttons for Multi and user mode. These reveal some additional controls to clear the panes or set default positions which are self-evident.

Saving a Multi-mode set

1. Setup the display set you want in user mode
2. Find the **Save Preset** button at the bottom of the button stack
3. Click this once to change message to Clcik Preset Button
4. Click the preset button to save into
5. Enter your descriptive text for your arrangement so as to fit the example button shown in the save menu..
6. Click OK in the save preset box.